



Simulator Functions Quick Reference

Clock controls	
Start the simulator clock	Left-click the START/CONTINUE button
Stop the clock (pause exercise)	Left-click the STOP button
Increase the clock speed	x2: F12 x5 Shift-F12
Return to normal clock speed	F11 , or left-click the time multiplier to the left of the clock digits.
Aircraft Display	
Display text of callsign	Move cursor over callsign in label
Graphic Route Display	F8 or Shift-R
Pilot/FMS View	Shift-P
Aircraft Properties View	Alt-P
Aircraft control	
Transmit to an aircraft	Hold down CTRL key while speaking
Map display	
Decrease the RADAR range (zoom in)	Tap the PAGE UP key
Increase the RADAR range (zoom out)	Tap the PAGE DOWN key.
Zoom with the mouse	Right-click at desired location, hold down, drag and release.
Off-centre RADAR map	Arrow keys
Restore default RADAR range and centre	HOME Key
Re-locate Scale Marker	Place cursor at desired location: Press F2
Display Text on Screen (Text Area)	F4 or Shift-T
Tools	
Cancel alarms	Centre click
Display Bearing and Range Line (BRL)	Locate cursor at start position (or over aircraft track), press F5 and drag BRL as required. Left-click to lock.
BRL between aircraft	Cursor over first aircraft, press F5 and drag to other aircraft. Left-click to lock onto the aircraft
Remove a BRL from the display	(Left-click if locked in place) Right (or Centre)-click to remove.
Advance to next scenario	L-click scenario number for one scenario forward, R-click for 5 scenarios forward.

Copyright © Visual Vectoring Pty Ltd 2014-2024